


**A8A, A81 Parts Kits**

Item	Description	Qty	Kit Number
1	<b>Adjusting Stem (All except "L")</b>	1	301888
1A	Adjusting Stem ("L" Types only)	1	
1A, 25, 26	<b>Adjusting Stem Kit ("L" Types only)</b>		201698
2	Adjusting Stem Seal Nut	1	301836
3	Bonnet (All except "L")	1	
3, 11, 8	<b>Bonnet Kit (All except "L")</b>		200910
3A	Bonnet ("L" Types only)	1	
3A, 11, 12, 32, 33, 33A	<b>Bonnet Kit ("L" Types only)</b>	1 ea	202714
4	Upper Spring Rest	1	
5	Range Spring (Outer)	1	
5A	Range Spring (Inner)	1	
7	Lower Spring Rest	1	
8	"O" Ring Diaphragm Follower (All except "L")	1	
4, 5, 5A, 7, 8, 11	<b>Spring Kit (All except "L")</b>	1 ea	202205
4, 5, 7, 11	<b>Spring Kit ("L" Types only)</b>		202702
9	Diaphragm Follower	1	
8, 9, 11	<b>Diaphragm Follower Kit</b>		200911
10	Diaphragm	1	
10, 11, 12	<b>Diaphragm Kit</b>		200873
13	Adapter Assembly	1	
20	Seal Cap	1	
11-14, 19-20	<b>Adapter Assembly A8A, A81</b>		202721
11-14, 19-20, 36, 37	<b>Adapter Assembly A8AS, A81S</b>		202722
11-14, 19-20, 36, 37	<b>Adapter Assembly A8AB, A81B</b>		202723
11-14, 19-20, 35	<b>Adapter Assembly A8AOE, A81OE</b>		202720
11-14, 19-20, 35-37	<b>Adapter Assembly A8AOES, A81OES</b>		202719
15	Pin, Locating	2	N/A
16	Body Assembly	1	N/A
17	Cartridge Assembly	1	
14, 17, 17A, 18	Cartridge Assembly (Red. Cap. 5/8")		202712
	Cartridge Assembly (Full Cap. 5/8")		202711
	Cartridge Assembly (7/8")		202710
	Cartridge Assembly (1-1/8"), A81 only		202709
	Cartridge Assembly (1-3/8"), A81 only		202708
21, 22	Access Fitting and Cap		N/A
31	Seal Cap (Only "L")	1	
31, 32	<b>Seal Cap Kit (Only "L")</b>		202713
33	Retaining Ring, "L" Bonnet	1	Part of 201698
33A	O/Ring, Adjusting Stem	1	Part of 210698
34	1/4" SAE Flare Half-Union	1	Part of 202714
35A	Seat, Pilot ("OE" Only)	1	
35B	O-Ring, Pilot Seat ("OE" Only)	1	
35C	Spring, Pilot Seat ("OE" Only)	1	
10-12, 35A-C	<b>Seat Kit, Pilot ("OE" Only)</b>		202715
36	Solenoid Operator Assembly	1	
36, 37, 38	<b>Solenoid Operator Repair Kit</b>		202700
39	Coil	1	
40	Sleeve, Coil Insert	2	
41	Clip, Coil Cover	1	
39, 40, 41	<b>Coil and Housing Kit</b>		Consult Factory

Item	Description	Qty	Kit Number
<b>Packages</b>			
6	<b>Bolt Package</b>		
	All except "OE" and "L"	4	202717
	"OE" Types only	4	202716
	"L" Types only	4	202718
8, 11-12, 14, 17A, 18, 19 37	<b>Gasket/O-Ring Kit, All Types except "L"</b>	8	202701
11-12, 14, 17A, 18, 19, 32, 33, 33A, 37	<b>GaskeVO-Ring Kit "L" Type</b>	10	203714

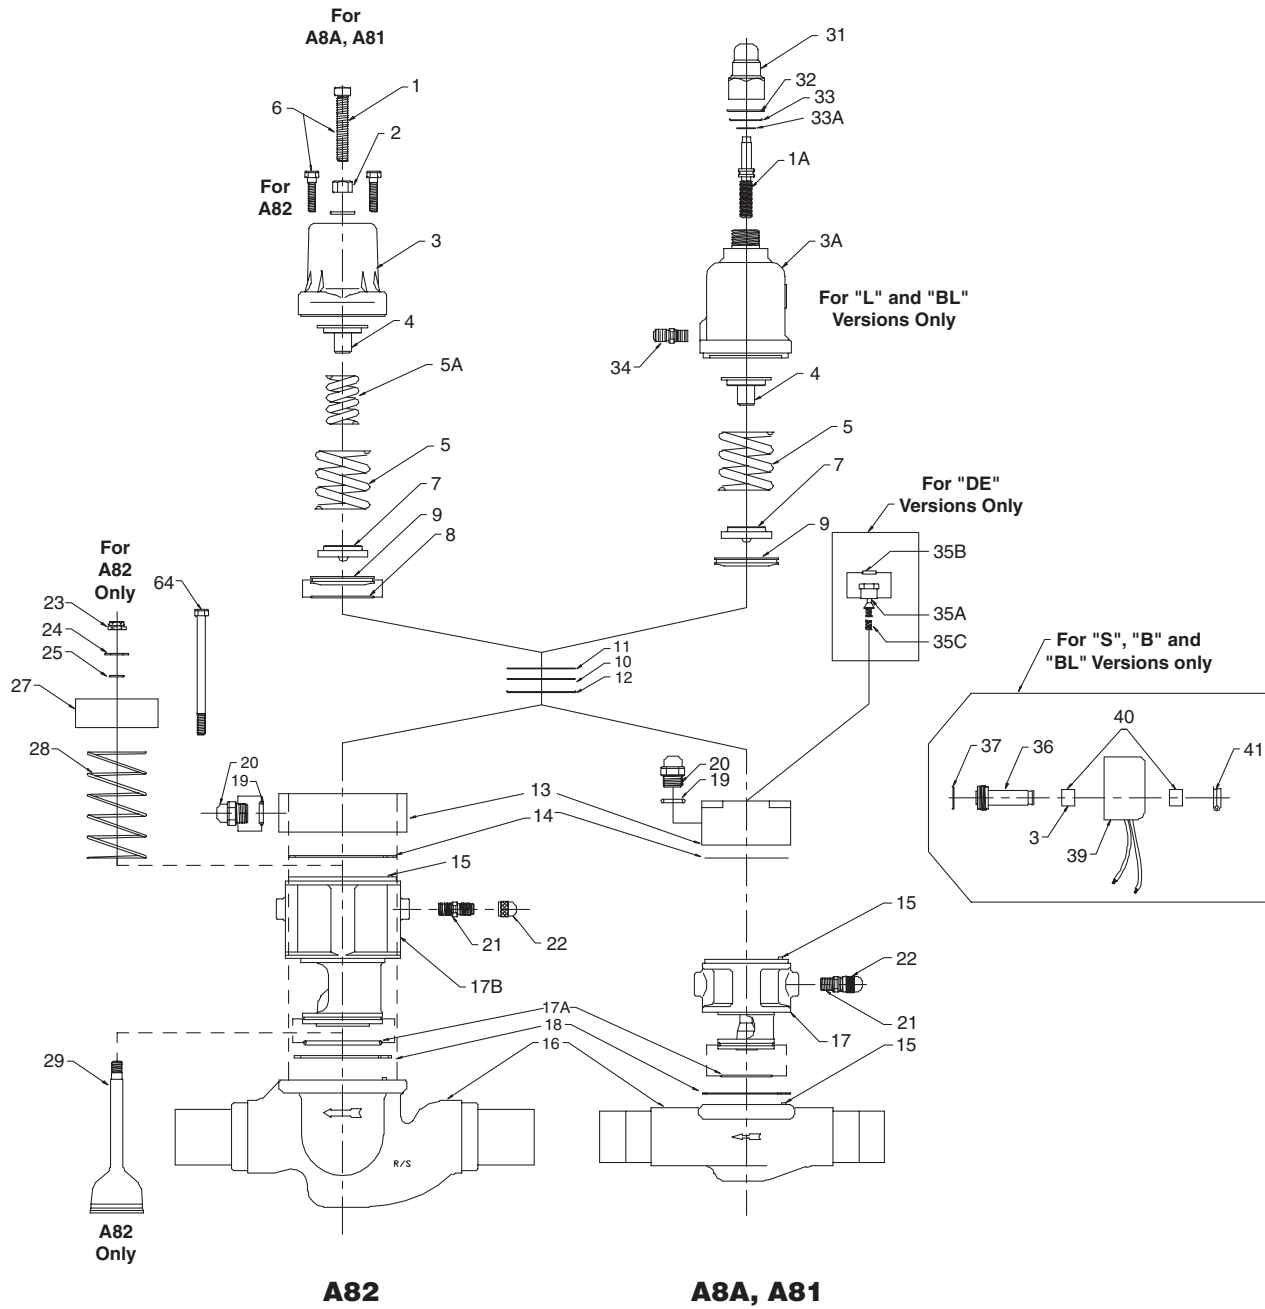

**A82 Parts Kits**

Item	Description	Qty	Kit Number
1	<b>Adjusting Stem (All except "L")</b>	1	301888
1A	Adjusting Stem ("L" Types only)	1	
1A, 25, 26	<b>Adjusting Stem Kit ("L" Types only)</b>		201698
2	Adjusting Stem Seal Nut	1	301836
3	Bonnet (All except "L")	1	
3, 11, 8	<b>Bonnet Kit (All except "L")</b>		200910
3A	Bonnet ("L" Types only)	1	
3A, 11, 12, 32, 33, 33A	<b>Bonnet Kit ("L" Types only)</b>	1 ea.	202714
4	Upper Spring Rest	1	
5	Range Spring (Outer)	1	
5A	Range Spring (Inner)	1	
7	Lower Spring Rest	1	
8	"O" Ring Diaphragm Follower (All except "L")	1	
4, 5, 5A, 7, 8, 11	<b>Spring Kit (All except "L")</b>	1 ea.	202205
4, 5, 7, 11	<b>Spring Kit ("L" Types only)</b>		202702
9	Diaphragm Follower	1	
8, 9, 11	<b>Diaphragm Follower Kit</b>		200911
10	Diaphragm	1	
10, 11, 12	<b>Diaphragm Kit</b>		200873
13	Adapter Assembly	1	
20	Seal Cap	1	
11-14, 19-20	<b>Adapter Assembly A82</b>		203803
11-14, 19-20, 36, 37	<b>Adapter Assembly A82S</b>		203805
11-14, 19-20, 36, 37	<b>Adapter Assembly A82B</b>		203804
11-14, 19-20, 35	<b>Adapter Assembly A82OE</b>		203806
11-14, 19-20, 35-37	<b>Adapter Assembly A82OES</b>		203807
15	Pin, Locating	2	N/A
16	Body Assembly	1	N/A
17B	Capacity Cartridge Housing	1	
14, 17A, 17B, 18, 26, 30	Cartridge Assembly (1-5/8")		203811
	Cartridge Assembly (2-1/8")		203812
	Cartridge Assembly (2-5/8")		203813
21, 22	Access Fitting and Cap		N/A
23	Self-Lock Nut	1	
24	Washer	1	
25	O-Ring	1	
26	Items 23-25	1 ea.	
14, 17A, 18, 26	<b>Service Kit, Piston/Plug</b>		203823
27	Piston	1	
28	Closing Spring	1	
14, 17A, 18, 26, 27, 28	<b>Piston Kit</b>		203824
29	Modulating Plug	1	
30	Items 27-29	1 ea.	
31	Seal Cap (Only "L")	1	
31, 32	<b>Seal Cap Kit (Only "L")</b>		202713
33	Retaining Ring, "L" Bonnet	1	Part of 201698
33A	O/Ring, Adjusting Stem	1	Part of 210698
34	1/4" SAE Flare Half-Union	1	Part of 202714
35A	Seat, Pilot ("OE" Only)	1	
35B	O-Ring, Pilot Seat ("OE" Only)	1	
35C	Spring, Pilot Seat ("OE" Only)	1	
10-12, 35A-C	<b>Seat Kit, Pilot ("OE" Only)</b>		202715

Item	Description	Qty	Kit Number
36	Solenoid Operator Assembly	1	
36, 37, 38	<b>Solenoid Operator Repair Kit</b>		202700
39	Coil	1	
40	Sleeve, Coil Insert	2	
41	Clip, Coil Cover	1	
39, 40, 41	<b>Coil and Housing Kit</b>		Consult Factory

**Packages**

6A	<b>Bolt Package</b>		
	All except "OE" and "L"	4	203820
	"OE" Types only	4	203821
	"L" Types only	4	203822
8, 11-12, 14, 17A, 18, 19, 37	<b>Gasket/O-Ring Kit, All Types except "L"</b>	8	203818
11-12, 14, 17A, 18, 19, 32, 33, 33A, 37	<b>Gasket/O-Ring Kit, "L" Type</b>	10	203819